



idesk


Instructions Arm Pad Lock Kit
402B/402W OROBLANCO

1

A  X2
B  X2


1) Bracket A & Bracket B

2

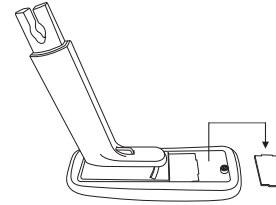


2) Slide the arm pad back and take a screwdriver and pop off the cover

3

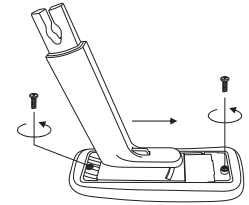


3) Slide the arm pad forward and remove screws

4

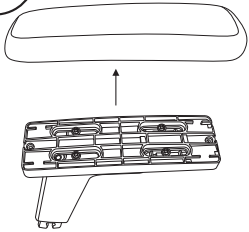


4) Remove the arm pad

5

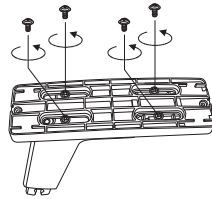


5) Remove four screws that secure the part for sliding

6

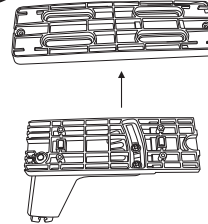


6) Remove part

7

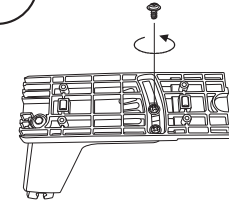


7) Make sure the angle adjustment is straight, then remove center screw

8

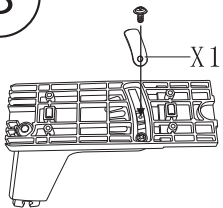


8) Place Bracket A and use the same screw to secure it

9

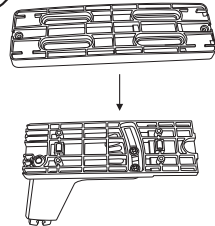


9) Place sliding part back on

10

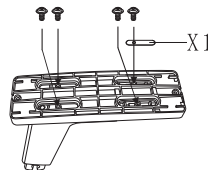


10) Pick any of the screw holes to install Bracket B and use the same screw to secure it

11

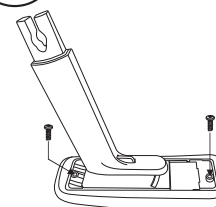

11) Reinstall the arm pad using the same two screws and secure the pad.

12

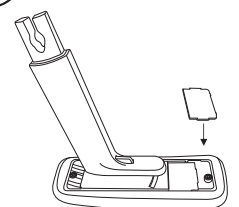

12) Pop cover back on