



ASSEMBLY INSRUCTIONS

AMBER


A121/A421/A821/A921

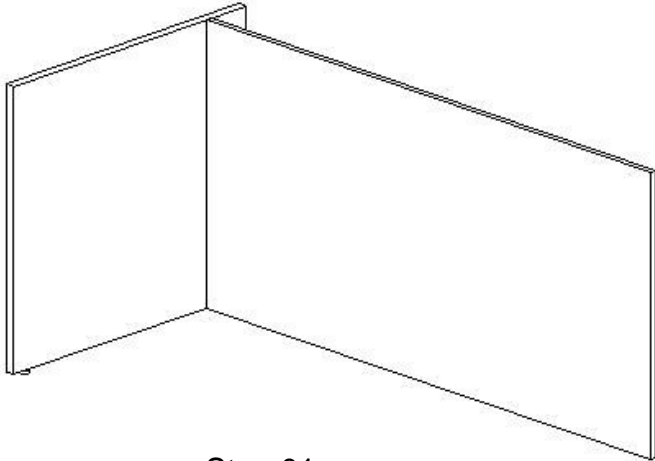

Step 01

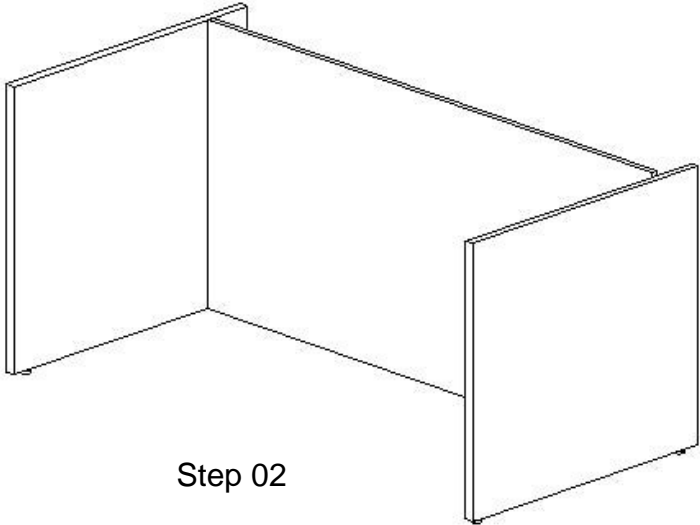

Step 02

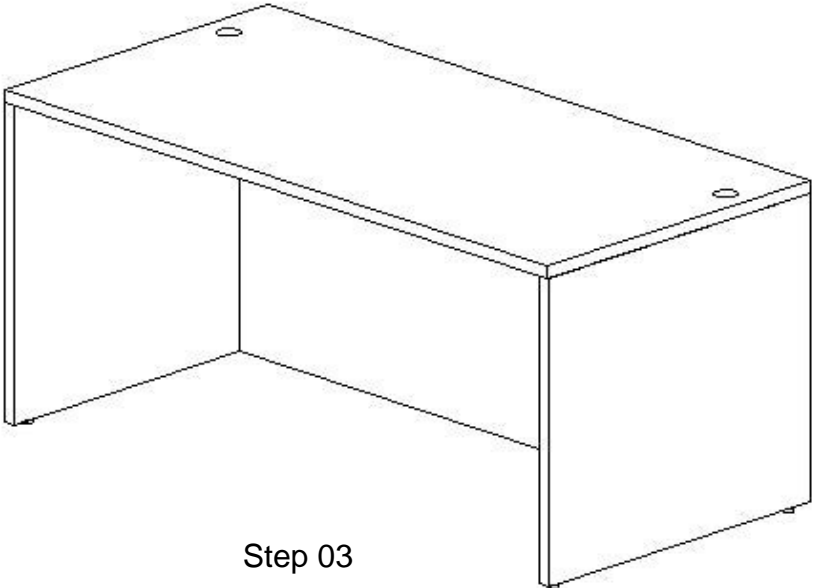


Step 03


ASSEMBLY INSRUCTIONS

AMBER


A131

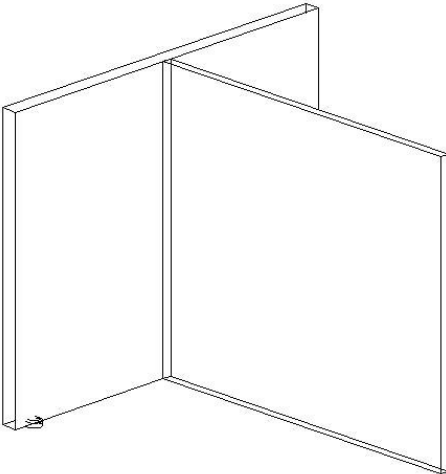

Step 01

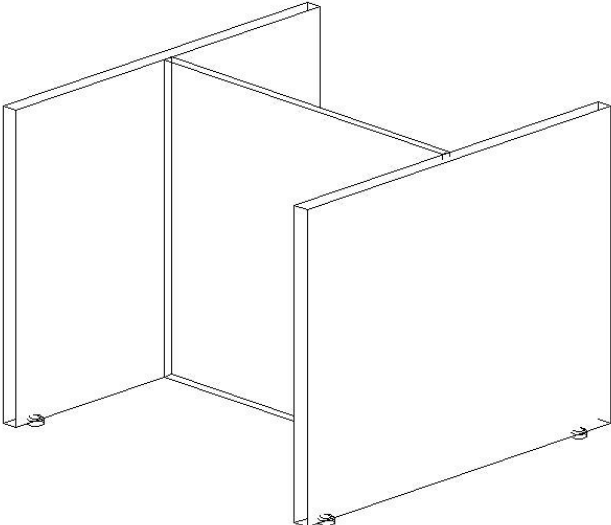

Step 02

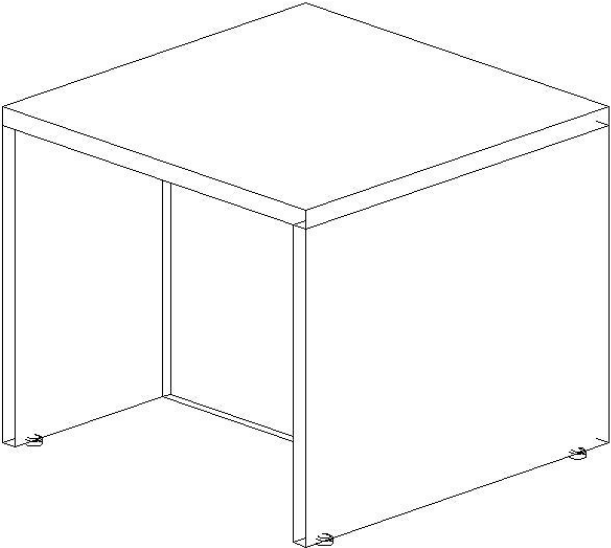

Step 03


ASSEMBLY INSRUCTIONS

AMBER


A221(L)

A222(R)


A230/231

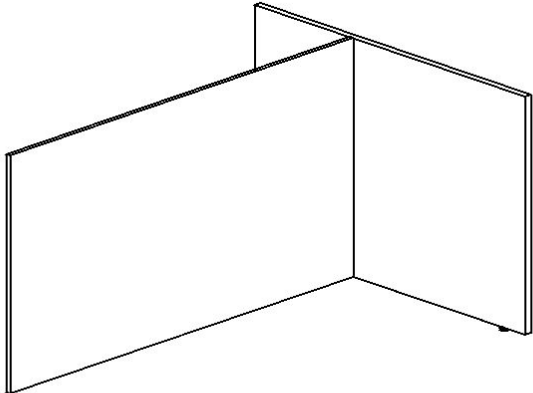


Step 01

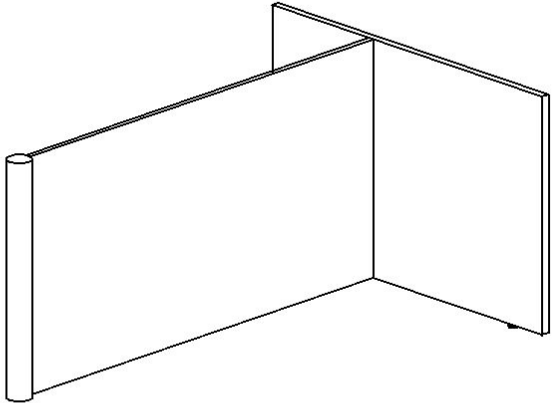

step 02

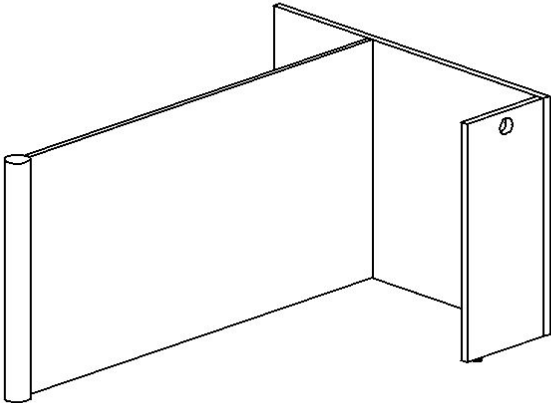

Step 03

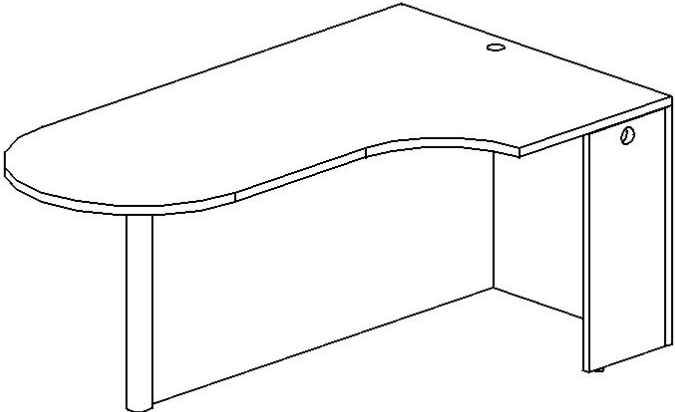


step 04

ASSEMBLY INSRUCTIONS


AMBER

A321(L)


A322(R)

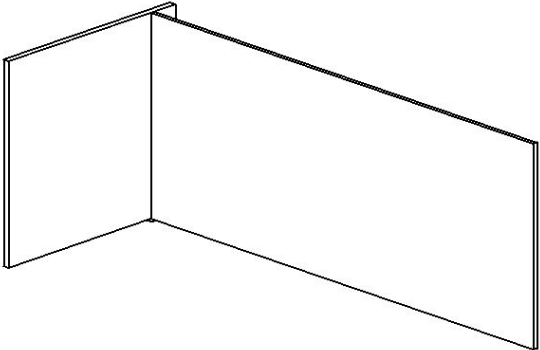


Step 01

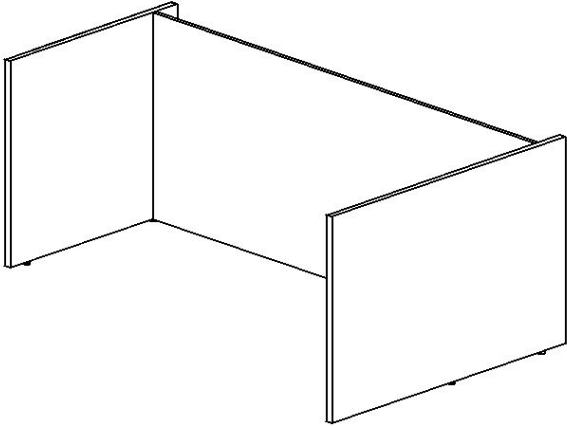

Step 02

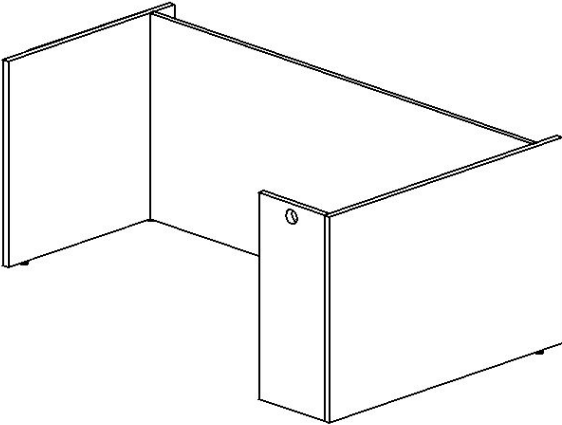

Step 03

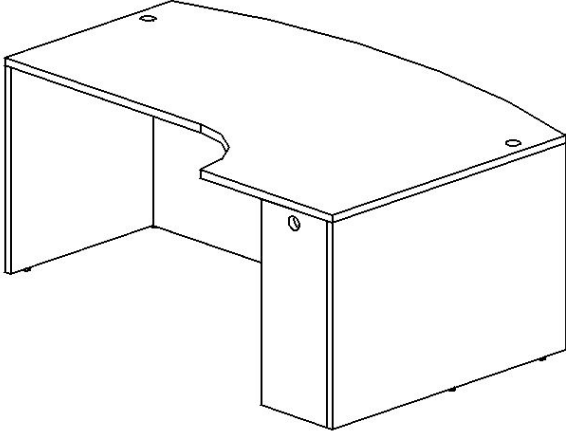


Sttep 04


ASSEMBLY INSRUCTIONS

AMBER

A324/A824/A924

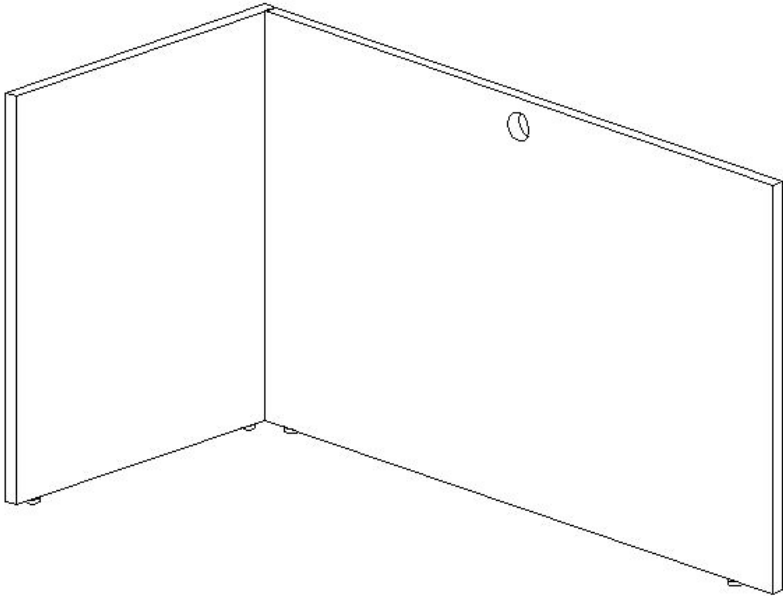

Step 01

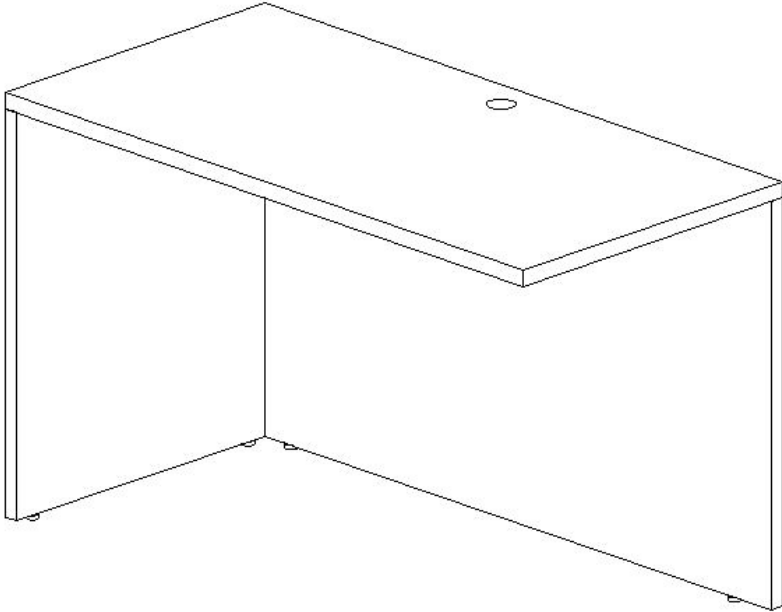


Step 02


ASSEMBLY INSRUCTIONS

AMBER


A326

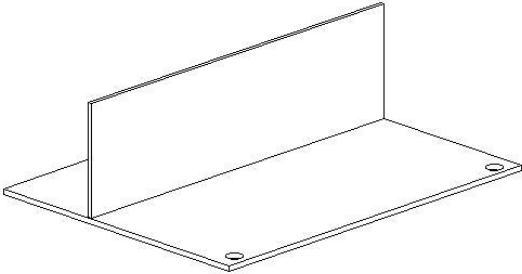


Step 01

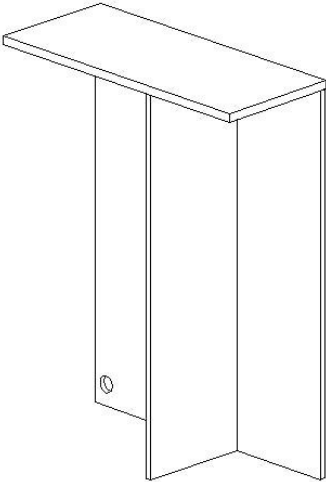


Step 02

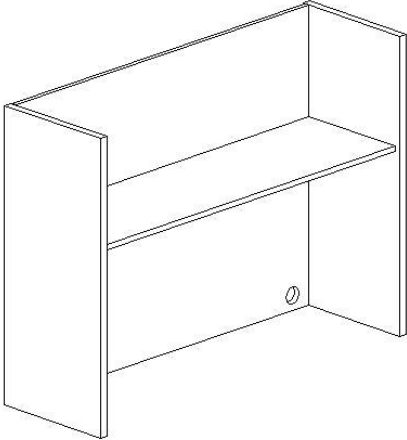

Step 03

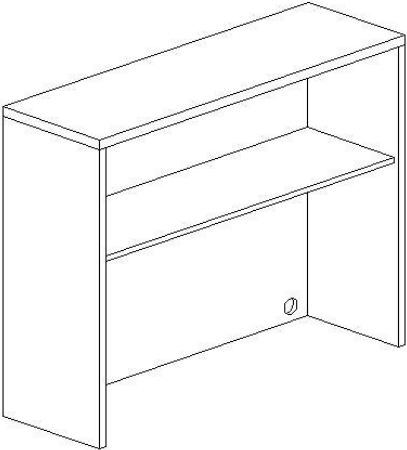

Step 04

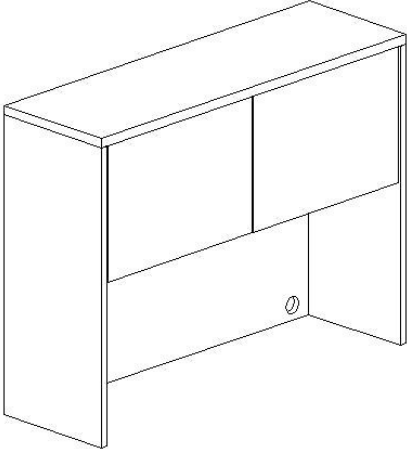


step 05


ASSEMBLY INSRUCTIONS

AMBER


A328

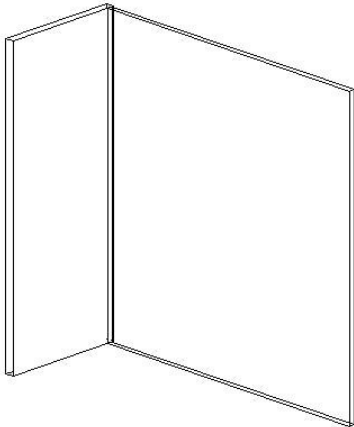


Step 01

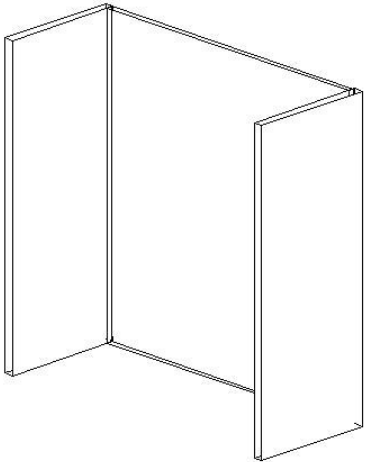

Step 02

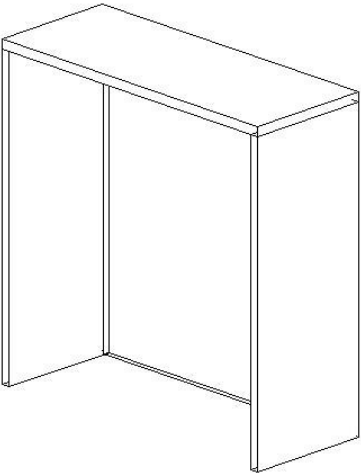

Step 03

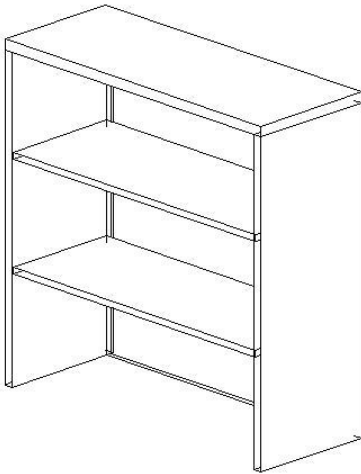


step 04


ASSEMBLY INSRUCTIONS

AMBER


A330

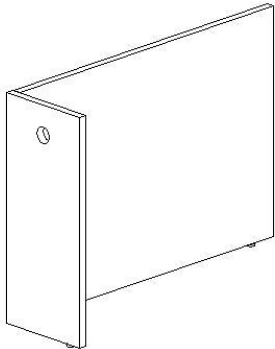


Step 01

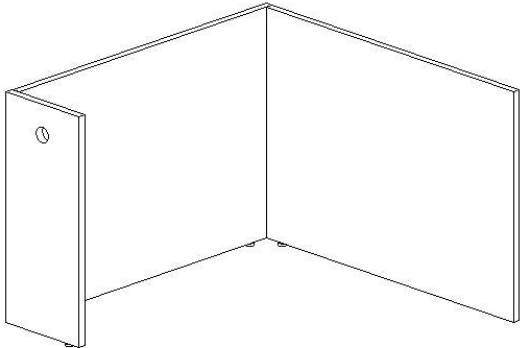

Step 02

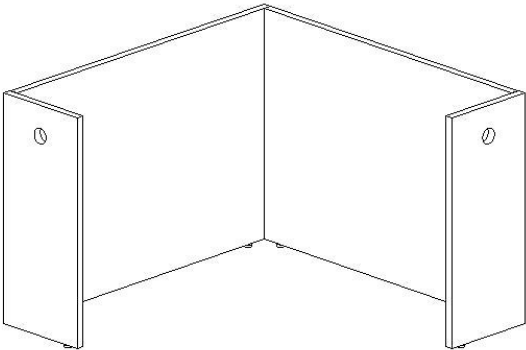

Step 03

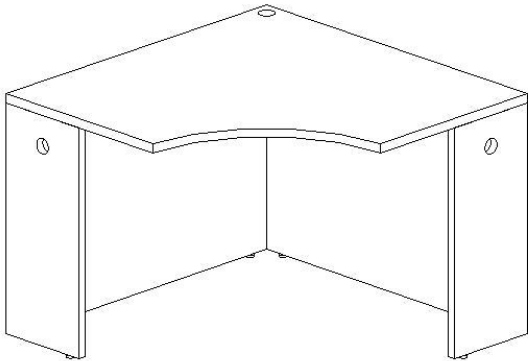


Step 04


ASSEMBLY INSRUCTIONS

AMBER


A331|

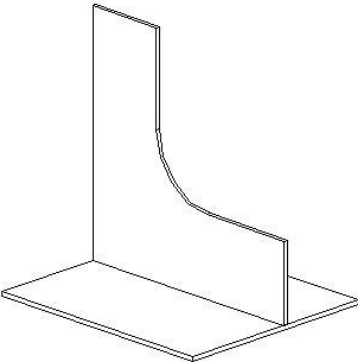


Step 01

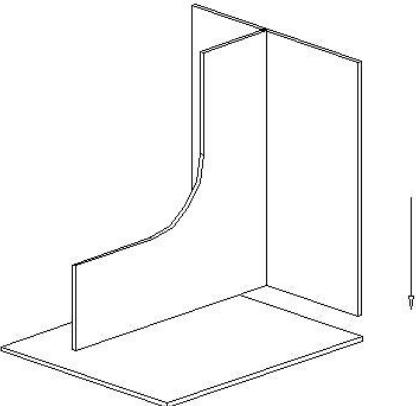


Step 02

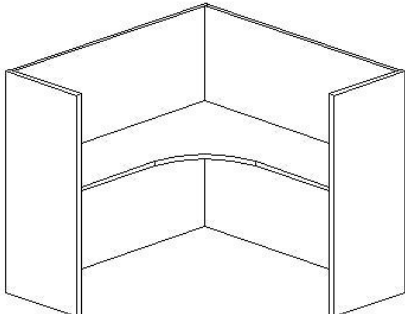


Step 03

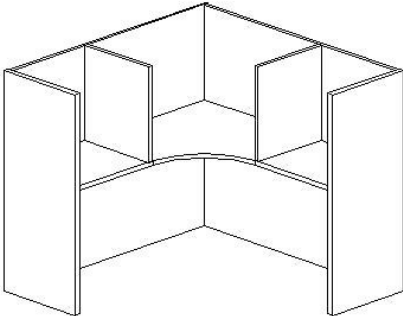

Step 04

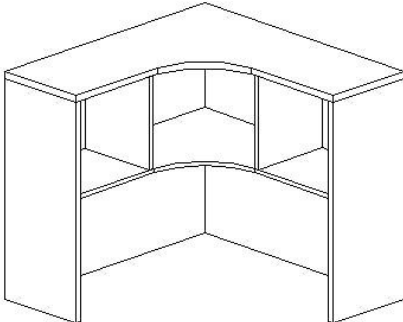

Step 05

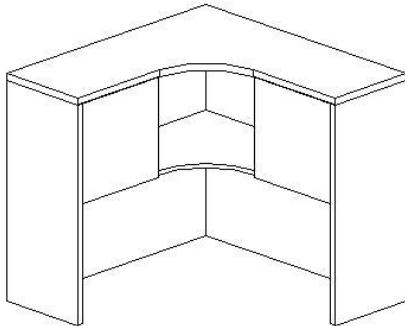


Step 06


ASSEMBLY INSRUCTIONS

AMBER


A426/A427/A428/A429/A926

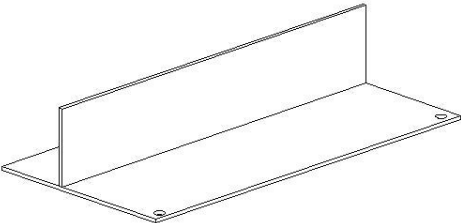


Step 01

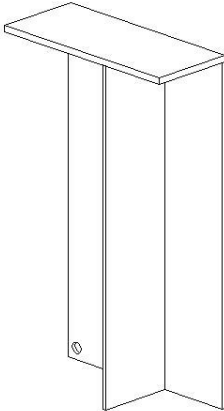


Step 02

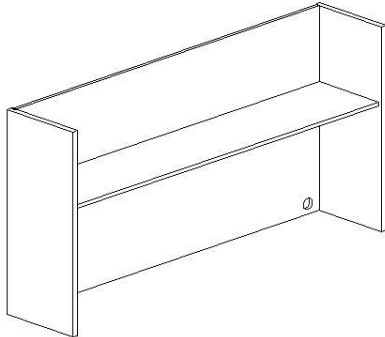


Step 03

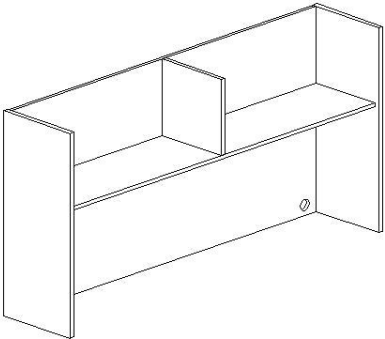

Step 04

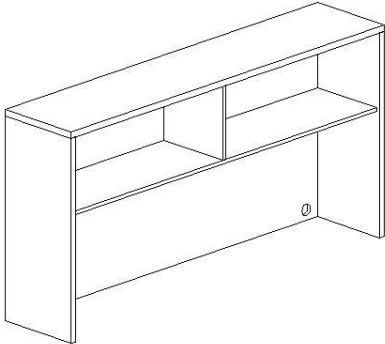

Step 05

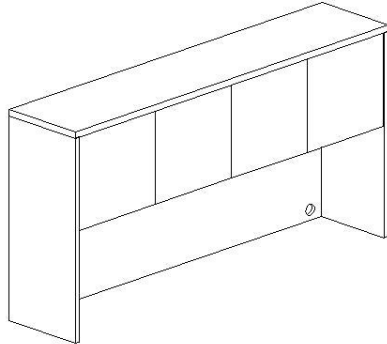


Step 06


ASSEMBLY INSRUCTIONS

AMBER


A540

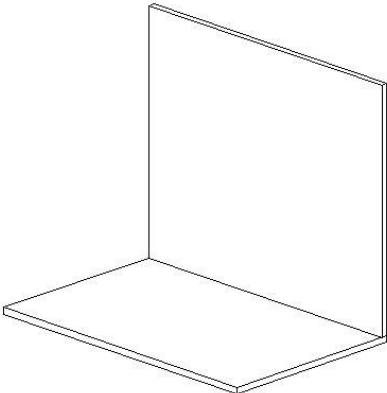


Step 01

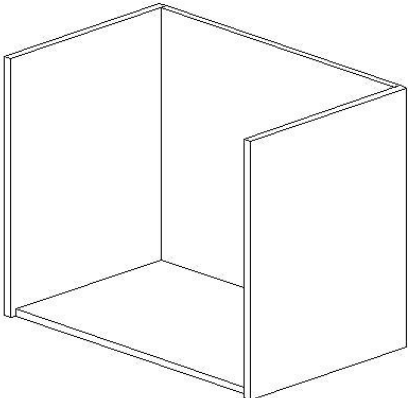


Step 02

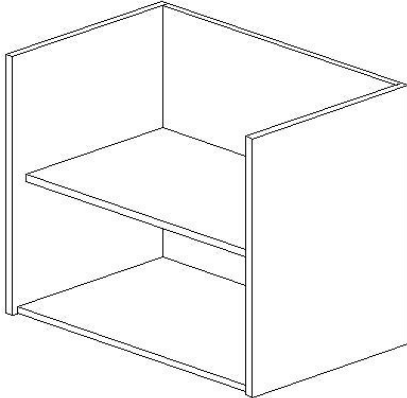


Step 03

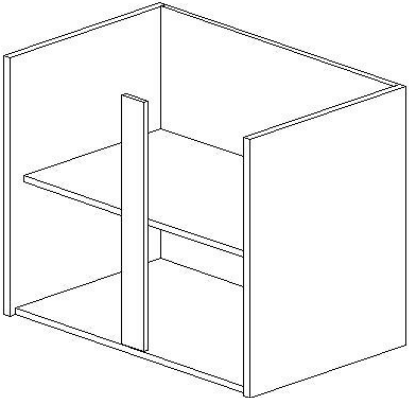

Step 04

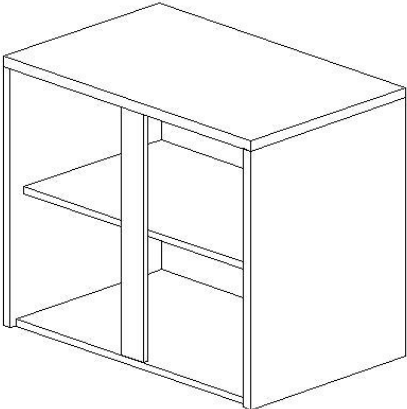

Step 05

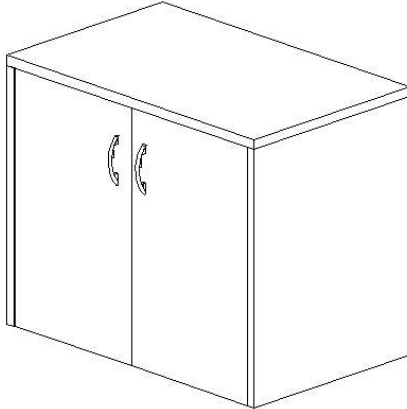


Step 06


ASSEMBLY INSTRUCTIONS

AMBER


A620/A630/A631

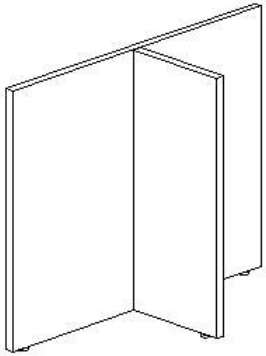

Step 01

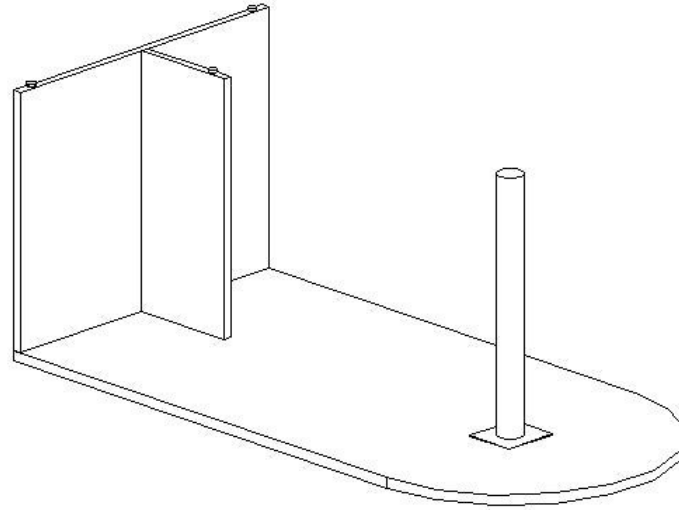

Step 02

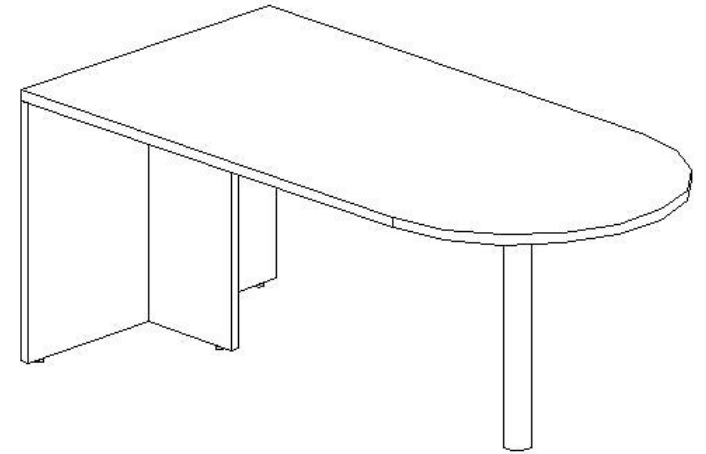


Step 03


ASSEMBLY INSRUCTIONS

AMBER


A621/A622

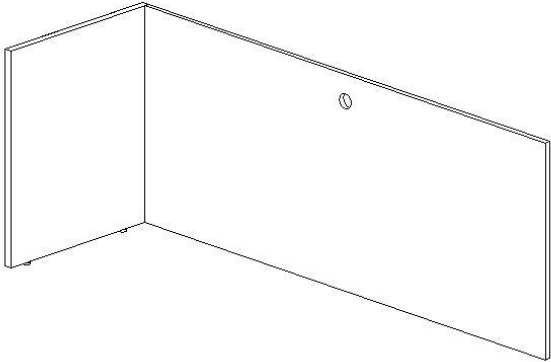


Step 01

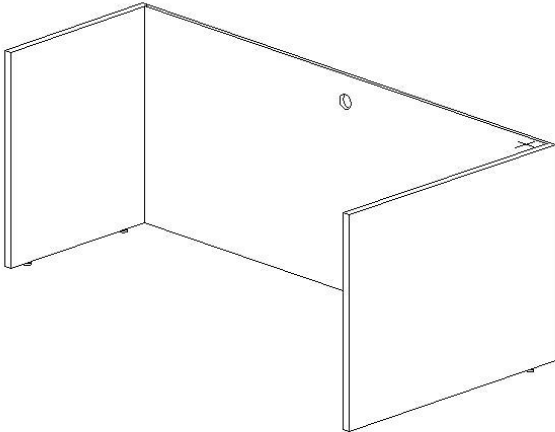

Step 02

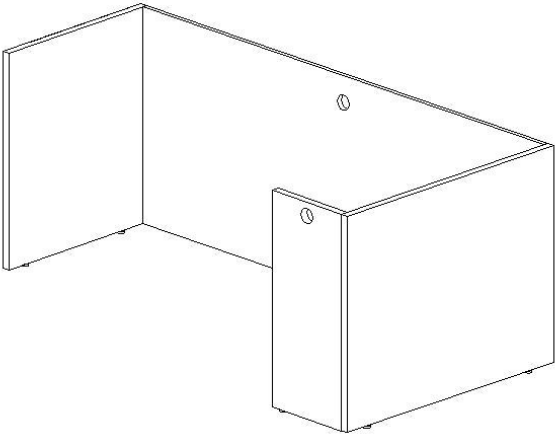

Step 03

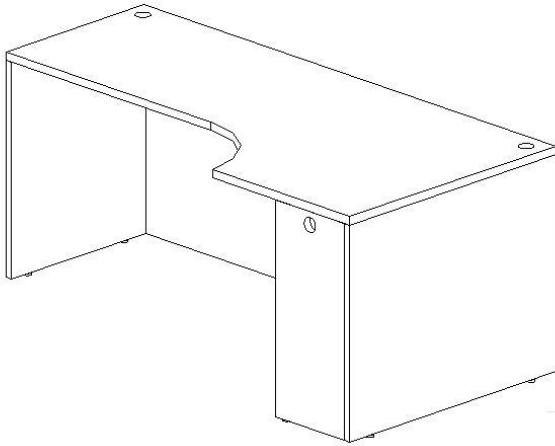


Step 04


ASSEMBLY INSRUCTIONS

AMBER

A623/A823/A923

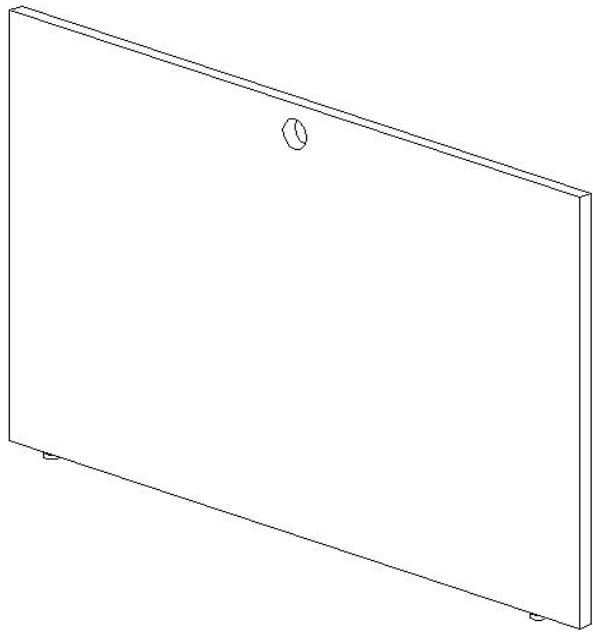

Step 01

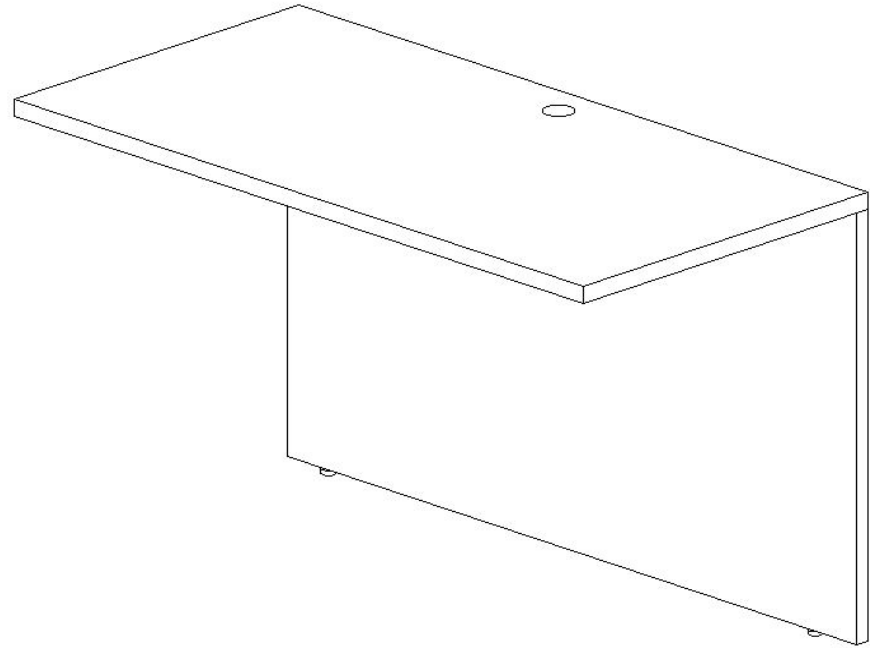


Step 02


ASSEMBLY INSRUCTIONS

AMBER


A720/A723

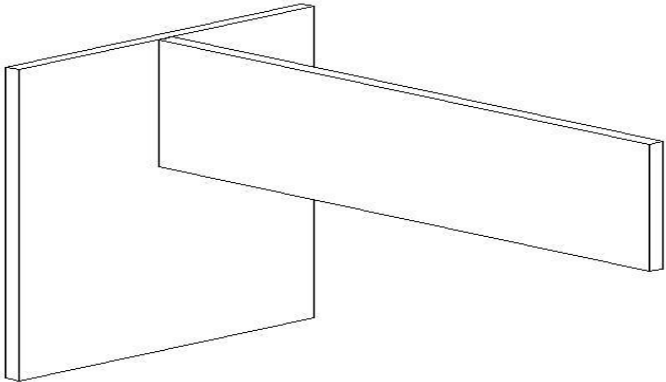

Step 01

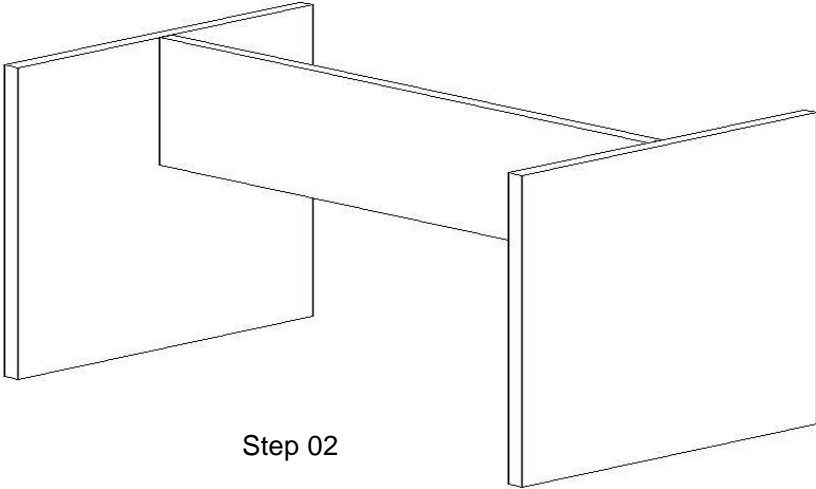

Step 02

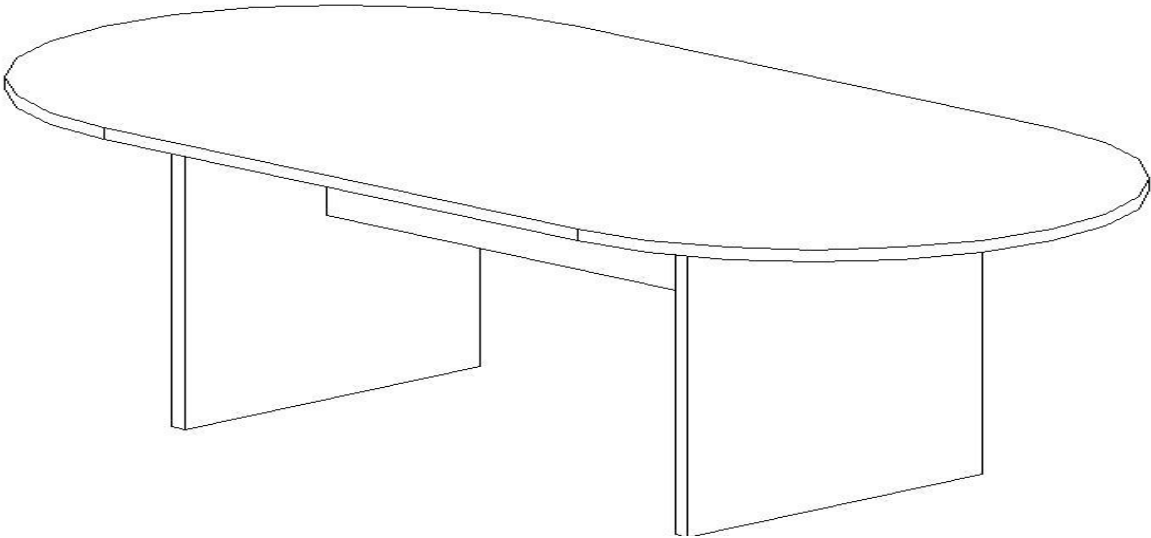


Step 03


ASSEMBLY INSTRUCTIONS

AMBER

A721/A726

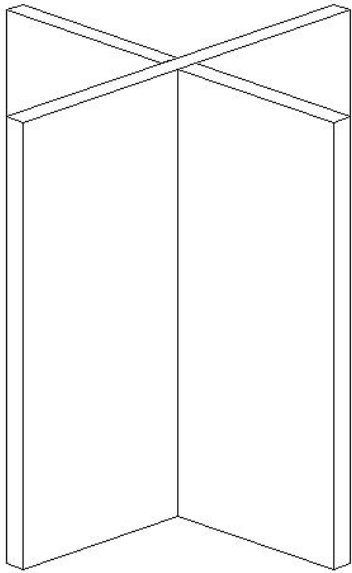

Step 01

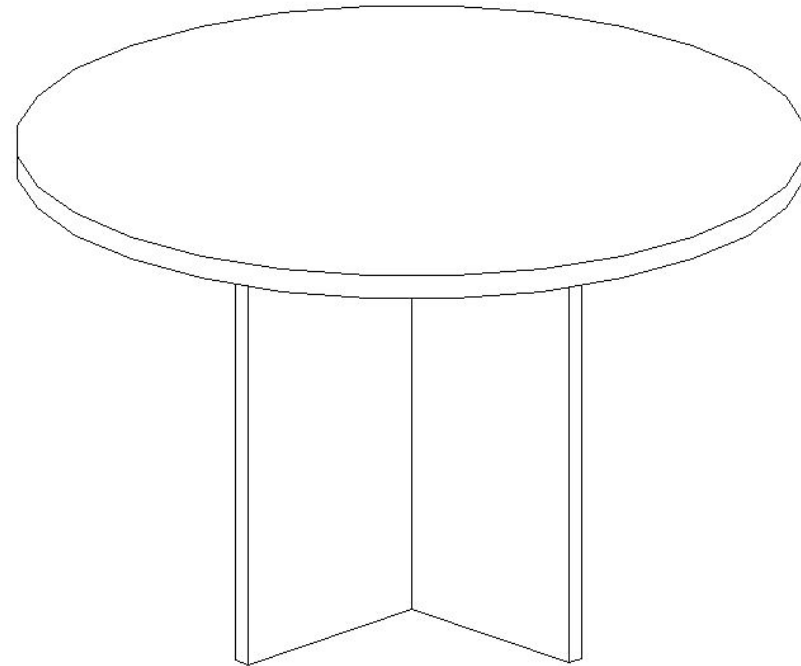


Step 02


ASSEMBLY INSRUCTIONS

AMBER


A728/A729

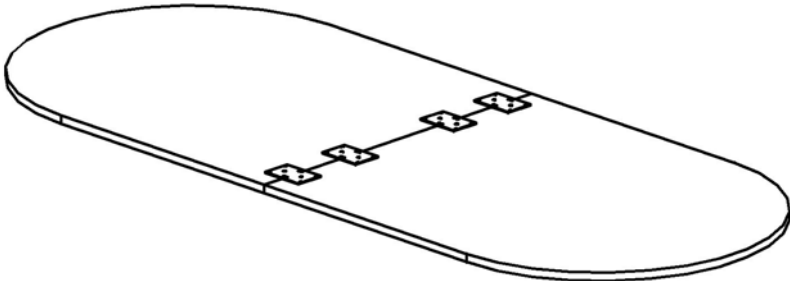


Step 01

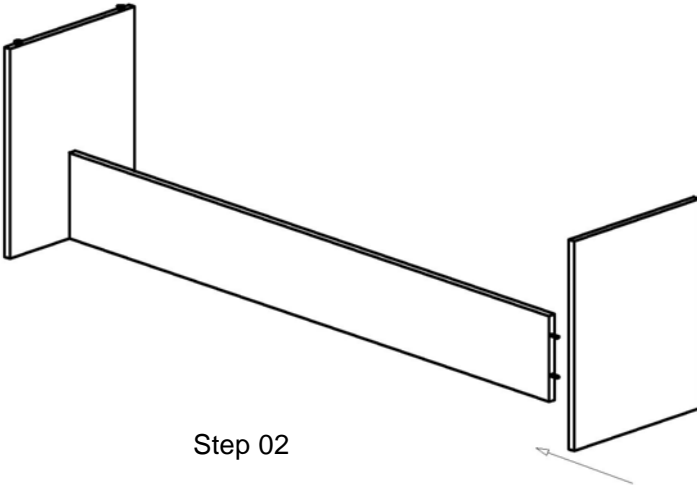

Step 02

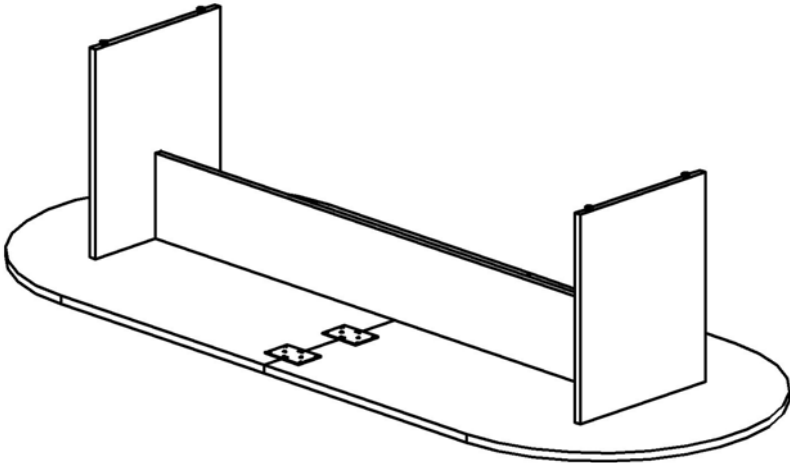

Step 03

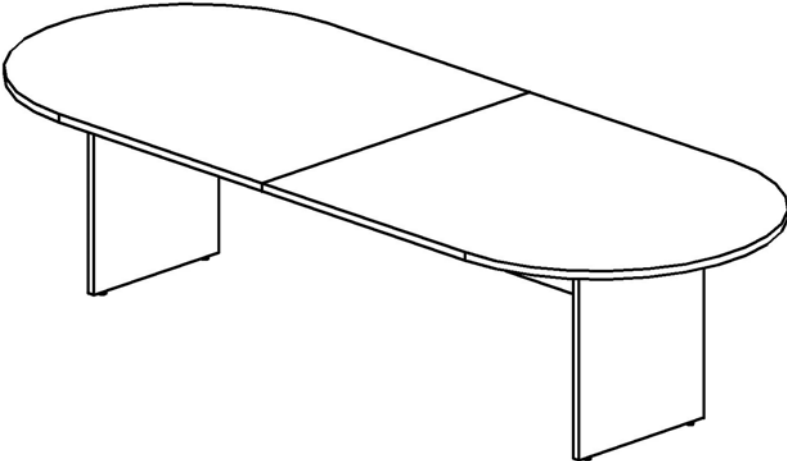


Step 04


ASSEMBLY INSRUCTIONS

AMBER


A822

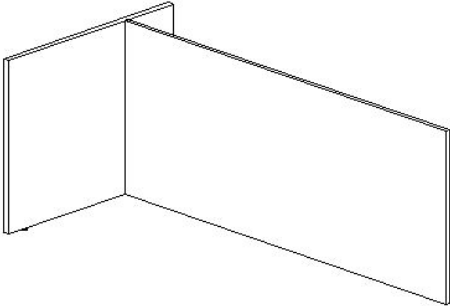

Step 01

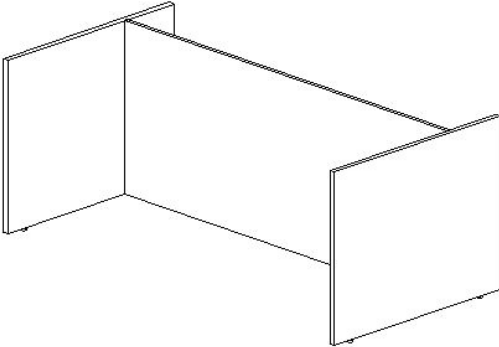

Step 02

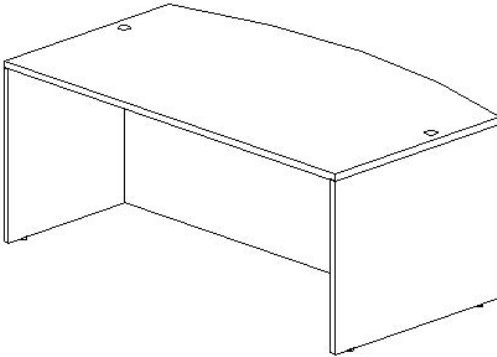


Step 03


ASSEMBLY INSRUCTIONS

AMBER


A825/A925

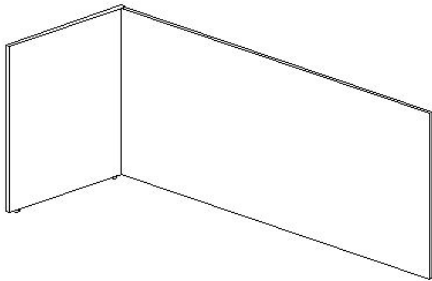

Step 01

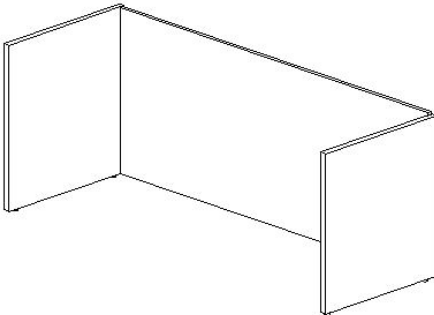

Step 02

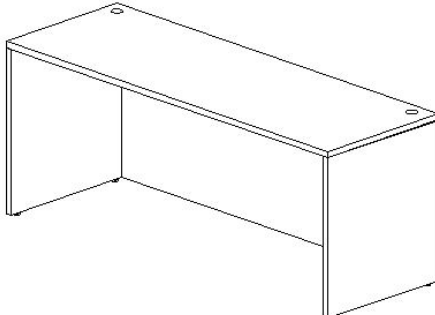


Step 03


ASSEMBLY INSRUCTIONS

AMBER


A829

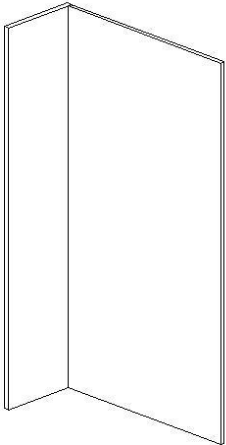


Step 01

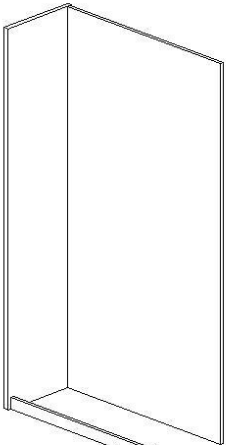


Step 02

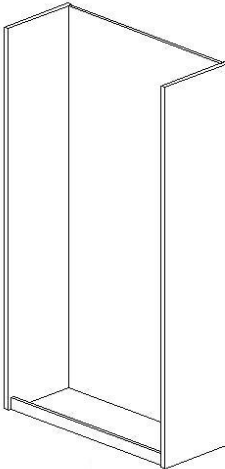

Step 03

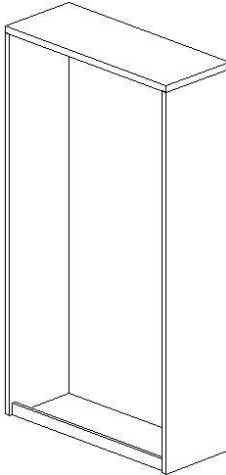

Step 04

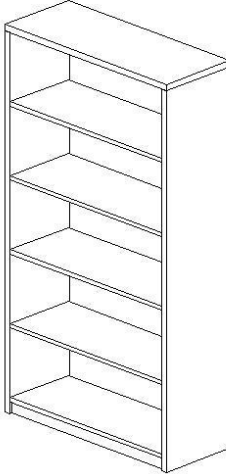


Step 05


ASSEMBLY INSRUCTIONS

AMBER


A828

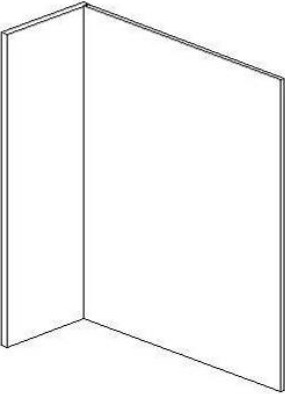


Step 01

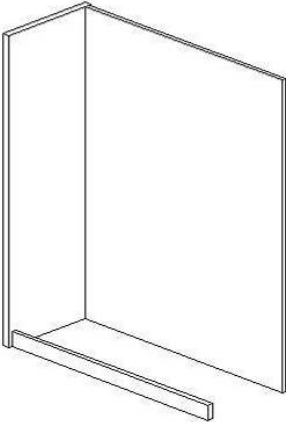


Step 02

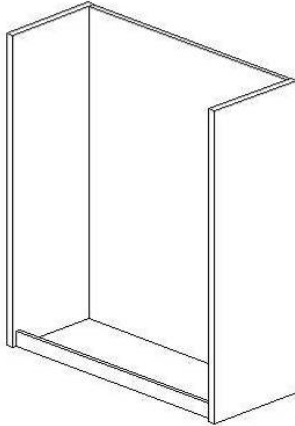

Step 03

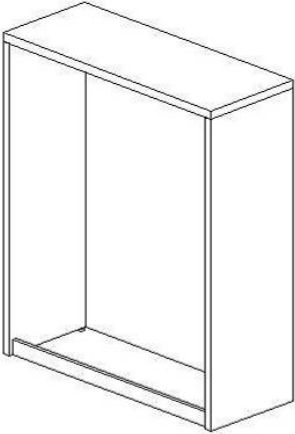

Step 04

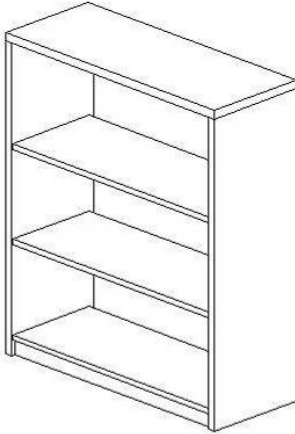


Step 05


ASSEMBLY INSRUCTIONS

AMBER


A122/A124

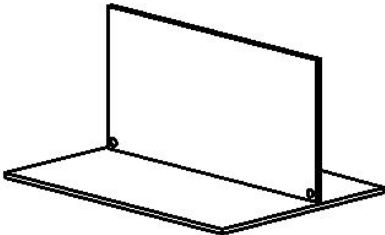


Step 01

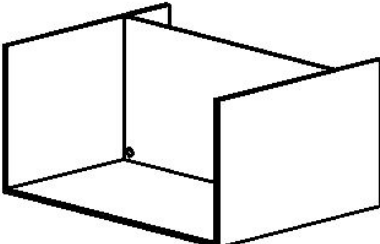


Step 02

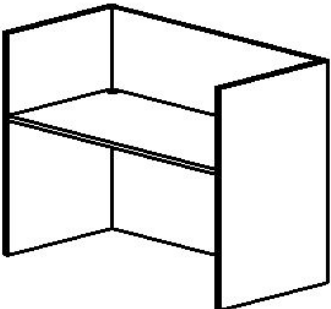


Step 03

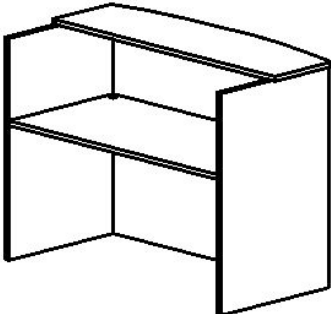


Step 04

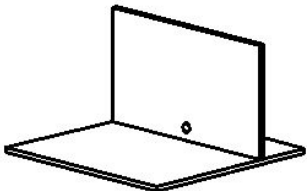


Step 01

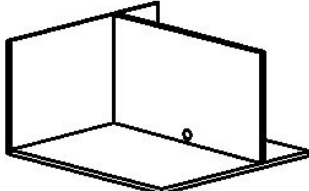

Step 02

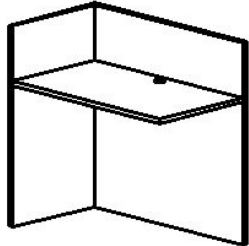

Step 03

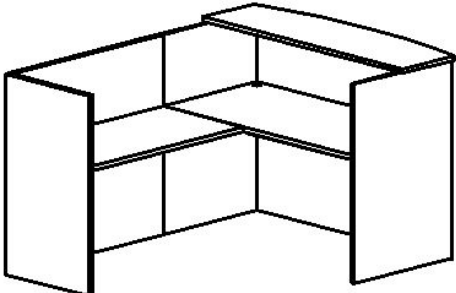

ASSEMBLY INSRUCTIONS

AMBER

TACK BOARD FOR 66"/72" HUTCH - GR

